

WALKER TOTE BAGS

FABRIC:

Front & Back -- 13" x 27"
 Batting – 13" x 27"
 Back Pocket – 13" x 10"
 Front Pocket – 13" x 7 1/2"

6" Velcro (Hook & Loop)
 (contrasting to the front fabric)
 (contrasting to the front fabric)

ASSEMBLY:

1. On front and back pockets, turn under the top edge 1/2" twice and stitch it down. (Fig. 1)
2. Place the front pocket on one edge of the front, matching the raw edges. Stitch a vertical line down the center of the pocket, dividing it into 2 smaller pockets. (Fig. 2)
3. Secure the back pocket to the other end of the front, using a 1/4" seam. (Fig. 3)
4. Fold the back fabric in half matching the short ends and crease the center. Put the batting on the WRONG side of the back fabric.
5. On the RIGHT side of the back fabric mark 4" from the center and 1" from the edge. Sew a 3" piece of Velcro lengthwise to the edge. Put the hooks on the same sides of the center and the loops on the other side of the center. (Fig. 4) When the bag is folded over the center rail of the walker, the Velcro will stick together and join the halves.
6. Make a quilt sandwich by placing the Front & Back RIGHT SIDES TOGETHER.
7. Sew around the edges with 1/2" seam – but leave about a 5" opening for turning. (Fig. 5)
8. Turn the sandwich right side out. Close the opening any way you want – slip stitch, topstitch, double-sided interface, etc.
9. Press and stitch close to the edge all around the bag.

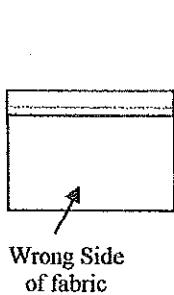


Fig. 1

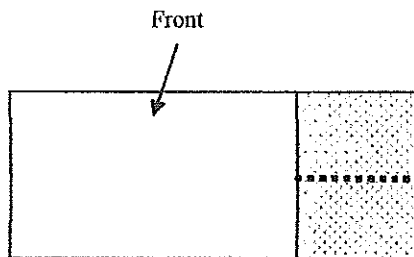


Fig. 2

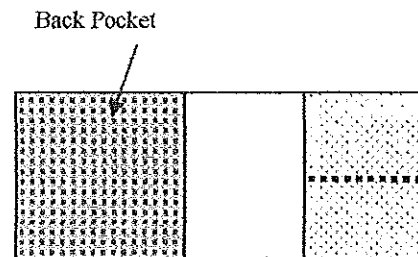


Fig. 3

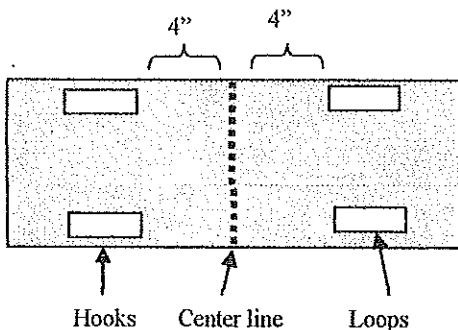


Fig. 4

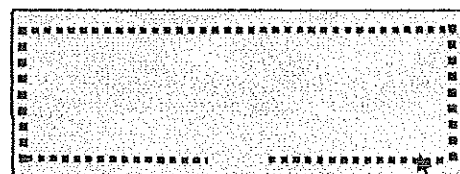


Fig. 5

Stitching Line